


## **BG726//Felt Laptop/Document Slip**

Fabric Composition:  
100% Polyester Felt

**Recommended area size for  
decoration (WxH in CM):**

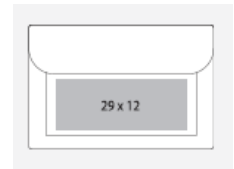

**Showcased decoration method – Transfer Print (123 Premium Flex//Adkins swing head heat press)**

1. Set the heat press up at 145 degrees, medium pressure, timer at 25 seconds
2. Lay the slip flat on the platen, unstrap the top flap and hang it off the side. Insert a Teflon cushion into the front pocket to elevate the print area away from the Velcro
3. Cover the surface with a polyester fleece sheet and pre-press for 5 seconds
4. Attach the transfer in your desired location with heat resistant tape, re-lay the polyester fleece sheet and continue to press
5. Remove the backing paper slowly and leave to cool

*\*Personalisation and decoration can be applied in many areas. The above illustrates the easiest recommended area on this product.*

### **Other recommended decoration methods:**

#### **1. Embroidery**

- 12cm hoop recommended for decoration
- Hoop up inside the front pocket rather than the main slip compartment

#### **2. Applique**

- Heat applied patches sold by third parties like Etsy can be easily applied slowly rotating the tip of an iron over the top until patches are fully adhered to the front panels
- Cover surface with a Teflon sheet
- Pin badges can be easily attached to the front pocket to compliment the style
- Faux leather/woven patches can be stitched to the front pocket to compliment the style

### **Related Products;**

- BG725
- BG727
- BG724
- BG730

