


QX501//Waterproof Universal Rain Cover

Fabric Composition:
100% Polyester

**Recommended area size for
decoration (WxH in CM):**

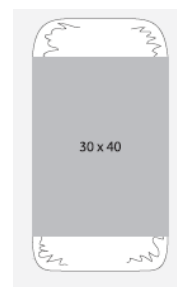

Showcased decoration method – *Transfer Print (123 Premium Flex//Adkins swing head press used in this example)*

1. Set the temperature on the heat press to 140 degrees, low pressure, timer at 20 seconds
2. Pull the product over the heat press pad
3. Cover the surface with a Teflon sheet and pre-press for 5 seconds
3. Attach the transfer onto the product in the desired location with heat resistant tape, re-lay the surface with a Teflon sheet and press
4. Rub the transfer with a cloth and then remove the backing paper slowly

**Personalisation and decoration
can be applied in many areas. The
above illustrates the easiest
recommended area on this
product.*

Other recommended decoration methods:

1. Sublimation

- When sublimating, have the heat press set at 180 degrees, high pressure, timer at 50 seconds
- Pull the product over the platen making sure your surface is flat prior to attaching the print paper
- Pre press for 5 seconds
- Cover with a Teflon sheet on both presses

Related Products;

- QD360
- QX335
- QX310

