


QD879//NuHide Washbag

Fabric Composition: Full Grain Leather Look NuHide
PU

**Recommended area size for
decoration (WxH in CM):**

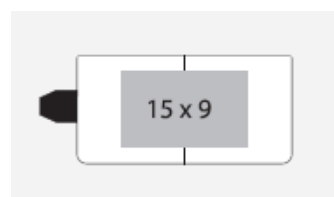

Showcased decoration method – *Transfer Print (123 Premium Flex//Adkins swing head heat press used in example)*

1. Set the temperature to the heat press to 145 degrees, medium pressure, timer at 25 seconds
2. Unzip the washbag and pull it over the corner of your platen, position a Teflon cushion/silicon pad under the desired print area, cover the surface with a polyester fleece sheet and pre-press for 5 seconds
3. Attach the transfer onto the product in the desired location with heat resistant tape
4. Relay the polyester fleece sheet over the surface and continue to press
5. Slowly remove the backing paper and leave it cool

**Personalisation and decoration can be applied in many areas. The above illustrates the easiest recommended area on this product.*

Other recommended decoration methods:

1. Embroidery

- 9cm hoop recommended for decoration area
- Fast frames would be recommended for this style

2. Applique

- Different types of patches and badges can be easily sewn via hand or machine to compliment this style.

Related Products;

- QD890
- QD889
- QD886
- QD892
- QD875
- QD877
- QD878
- QD880
- QD881
- QD885